






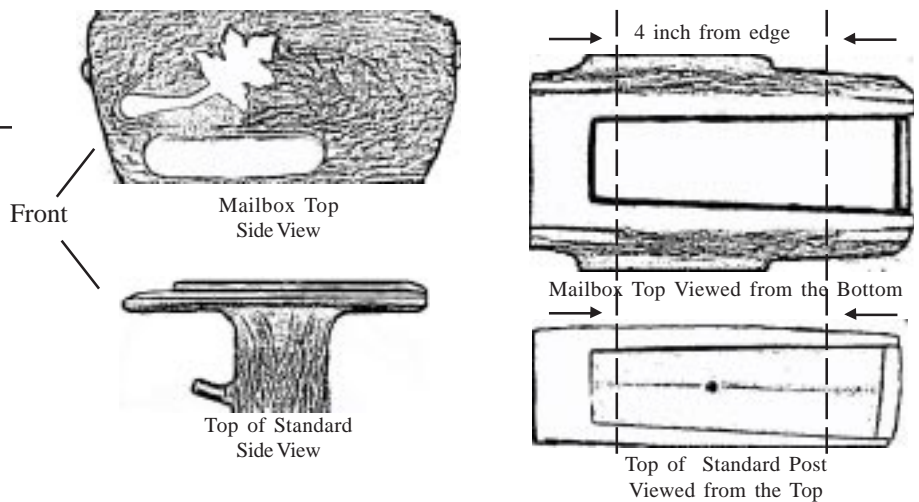
# Mailbox Assembly Instructions

**Support Info:** Website: <http://www.ByNaturesDesigns.com> E-Mail: [webmaster@bynaturesdesigns.com](mailto:webmaster@bynaturesdesigns.com)

Hardware Included:	Mounting Purpose:	Part Example:
4 - Long Hex Head Self Tapping Screws	Mount Mailbox to Decorative Post	
8 - Short Hex Head Self Tapping Screws	Attach Decorative Top Vines to Top of Mailbox	
3 - Long Hex Head Self Tapping Screws	Attach Long Vine to Side of Mailbox & Post	
For Assembly Assistance Please Call Landon at 330-262-3970		
4 - 2" x 3/8" Hex Head Lag Bolts	Attach Mailbox Kit to Secured 4 x 4 Post	
4 - 1.5" Flat Washers	With All Lag Bolt	


**NOTE:** Mailbox and Post are Keyed to only slide together in one direction. Screws do not require pre drilling and can be driven directly into the box during assembly. **DO NOT** over tighten any of the screws or stripping will occur.

- Slide Mailbox onto Decorative Post
- Use the 4 Hex Head Self Tapping Screws to mount Mailbox to Decorative Post at least 4 inches from the edge
- Slide Assembled Mailbox Kit over Secured 4 x 4 Post extending from the ground by the following measurements:  
MAILBOX II - 4x4 post = 24 Inches  
MAILBOX IV - 4x4 post = 18 Inches  
MAILBOX XV - 4x4 post = 30 Inches
- Secure Assembled Mailbox Kit to 4x4 post with the included Lag Bolts and Flat washers



## Attaching Optional Decorative Vines:


- Measure in 5 3/4 inches from the front and mark

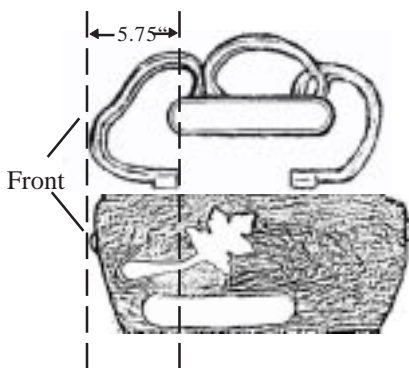


- Align top vine so that it is verticle to the box



- Attach front of Top Vine with 2 short Hex Head Self Tapping screws

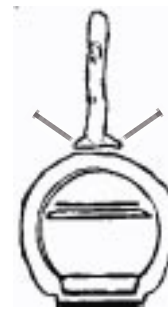

- Attach Y shaped vine adapter between front and back mounting pads of Top Vine with 4 short Hex Head Self Tapping Screws

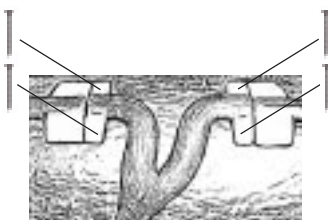

- Attach rear Mounting pads of Top Vine with 2 short Hex head Self Tapping Screws



- Slide long flexible vine over bottom of Y shaped Vine and attach to box with 1 long Hex Head Self Tapping Screw.

- Wrap vine to suit and attach to post with additional 2 long Hex Head Self Tapping Screws.

*(for best results fill vine with hot water and let sit before attaching)*

NOT RESPONSIBLE FOR ACCIDENTS DURING ASSEMBLY